


Virtual Oscilloscope Tutorial

-Sukriti Dhang


VLT IITKgp

In this experiment we consider 8x10 grid. The vertical grid is divided into 8 (major) divisions and the horizontal grid is divided into 10 major divisions. To improve the precision, each of these divisions is further broken up into 5 minor divisions. The horizontal axis (X-axis) represents time and the vertical axis (Y-axis) represents voltage.

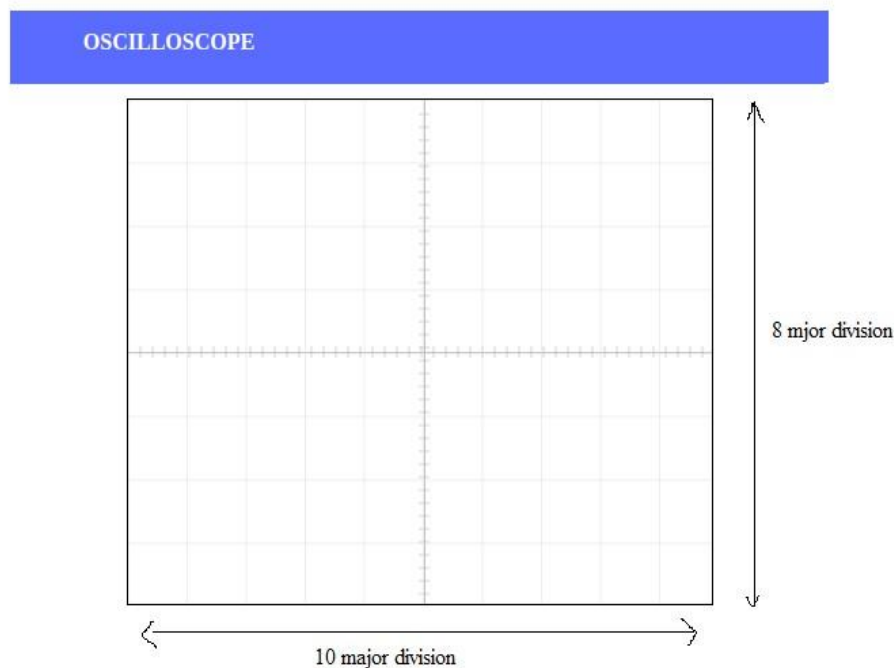

volt/div= 1volt. (which means each major division is 1 volt, and each minor division is 0.2 volt)

time/div = 0.1ms/sec (which means each major division is 0.1ms, and each minor division is 0.02 ms)

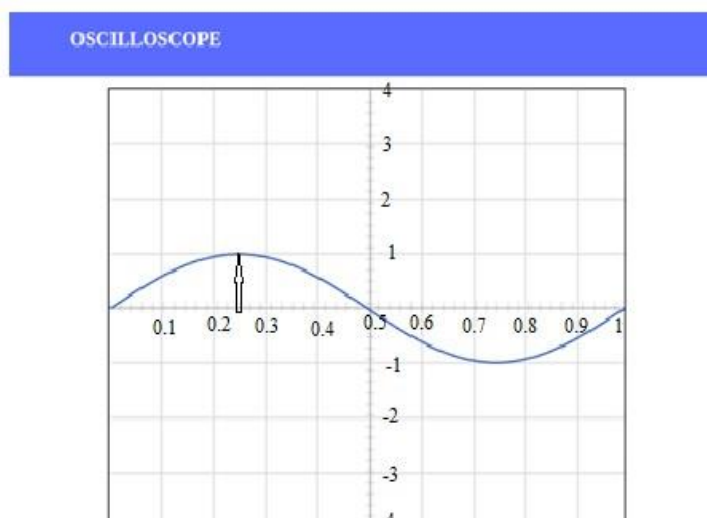

SET 1: Setting amplitude to 5 volt (10 Vp-p), frequency to 1000hz (default value)

Step 1: Double click on sine wave.

In the figure 1, channel 1---> volt/div is set to 1 volt and amplitude of the input signal is 5 volt. Here, time/div is set to 0.1msec/div, the frequency is 1 kHz and its period is 1 complete cycle in 1msec.



Figure 1

As, channel 1 ---> volt/div is 1 volt and amplitude is set to 5 volt, input signal in the oscilloscope screen is clipped up. So, increase the volt/div for channel 1 and set to 5 volt/ div. And time/div is 0.1ms/div, 1complete cycle is 1ms.

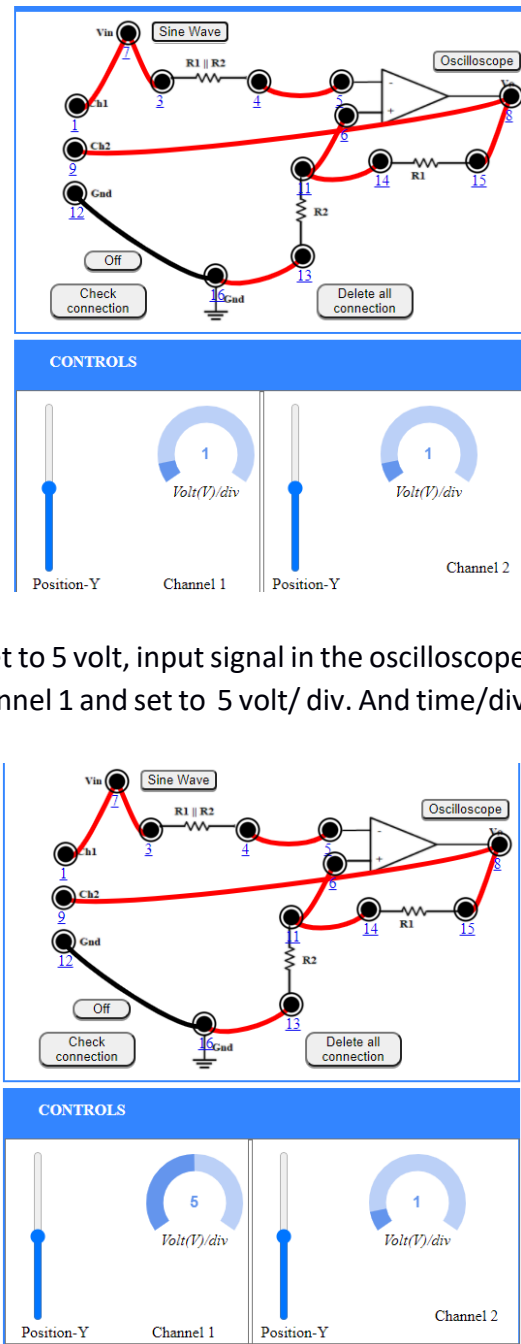


Figure 2

Step 2: Click on oscilloscope.

Here as, channel 2---> volt/div is 1 volt and amplitude is set to 5 volt, but output amplitude is equal to v_{sat} , output signal in the oscilloscope screen is clipped up.

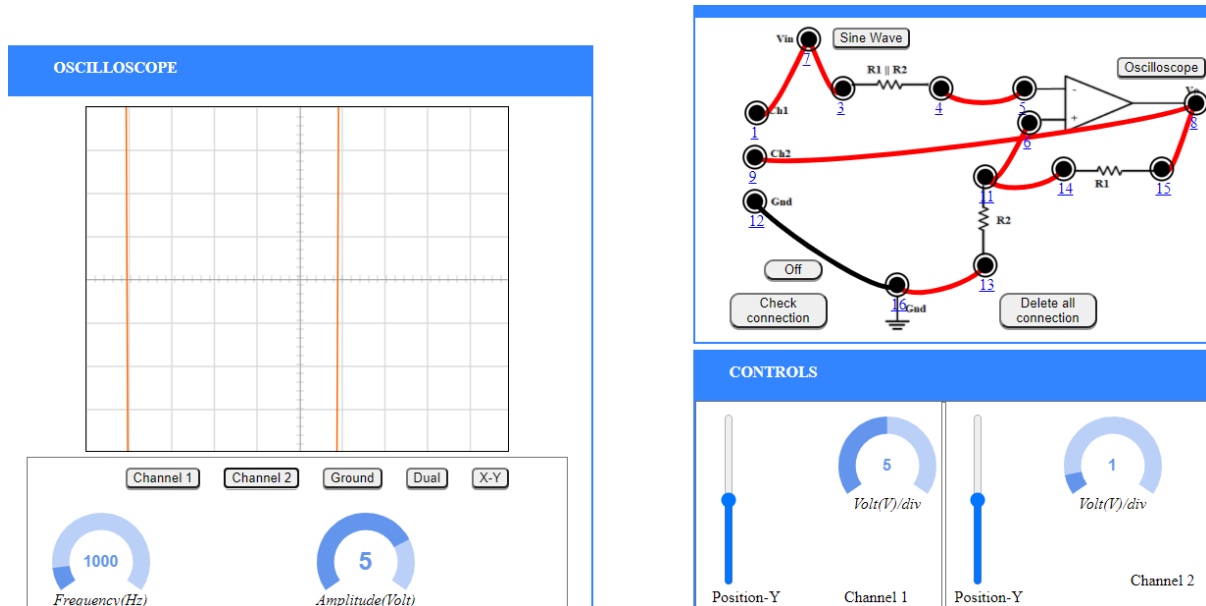


Figure 3

So, increase the volt/div for channel 2 and set to 5 volt/ div. And time/div is 0.1ms/div. In the figure4 shows the output signal.

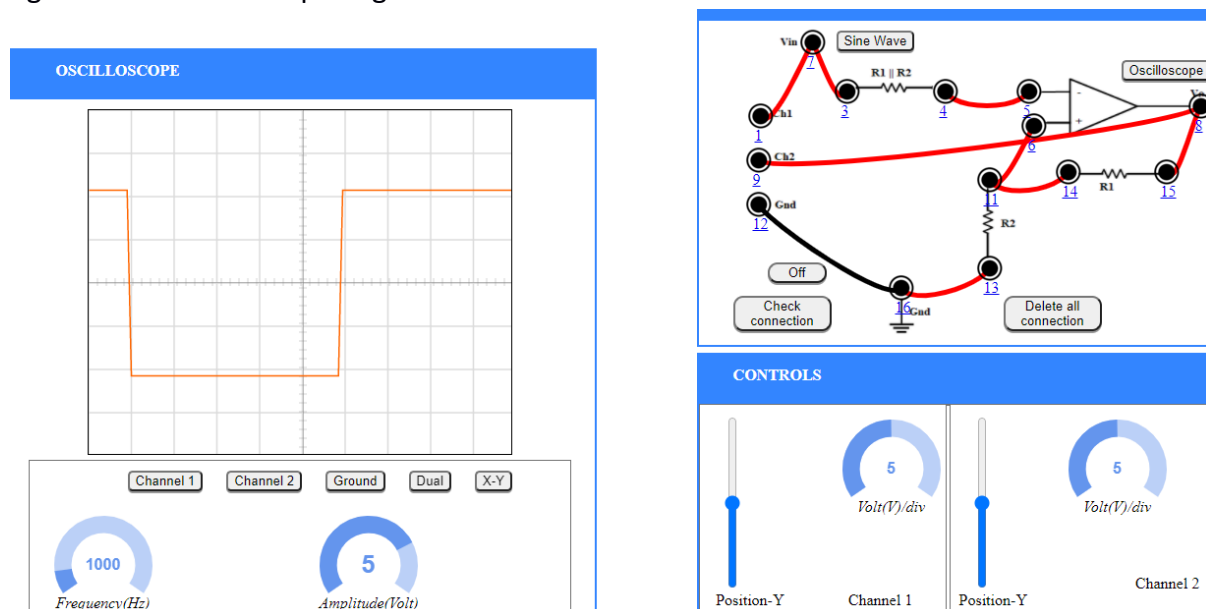


Figure 4

Step 3: Click on dual function.

(Note: For dual output, channel 2 controller controls both the signals.)

Here as, channel 2 is used to set the volt/div---> volt/div is 5 volt and amplitude is set to 10

volt, output signal in the oscilloscope screen is upto 2 division. And time/div is 0.1ms/div. In the figure 5 shows the both signal. As frequency is 1000hz, and 0.1ms/div, therefore to complete 1 cycle it takes 1msec.


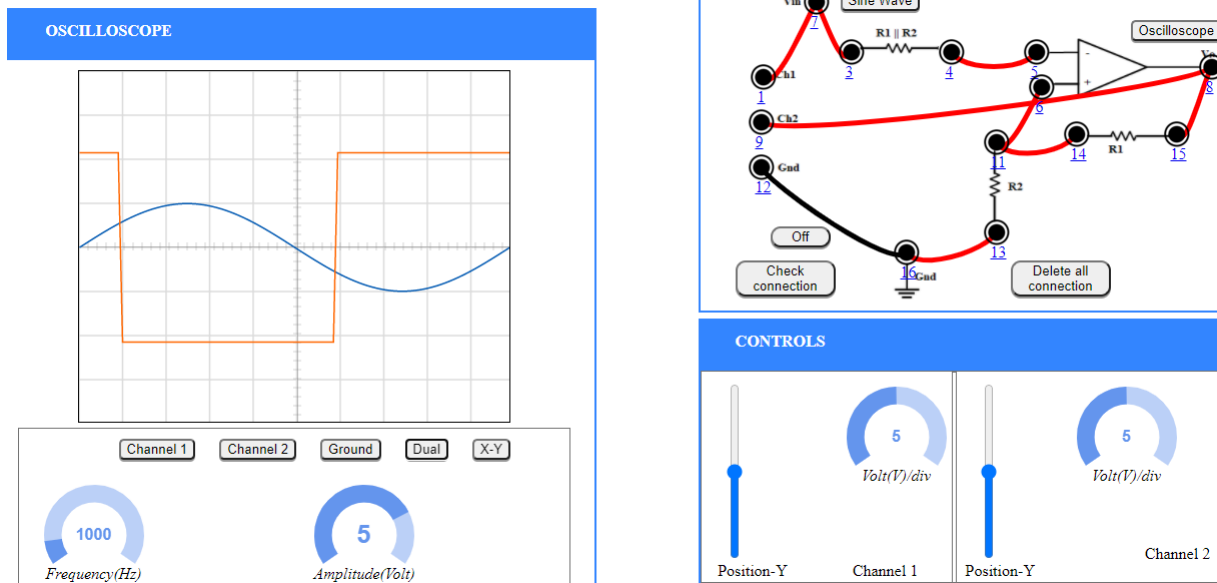


Figure 5

Step 4: Click on X-Y function.


X-Y mode is a specialized two-channel mode of oscilloscopes when the signal of channel 1 is used for the deviation along the horizontal axis (X) and the signal of channel 2 – along the vertical axis (Y).

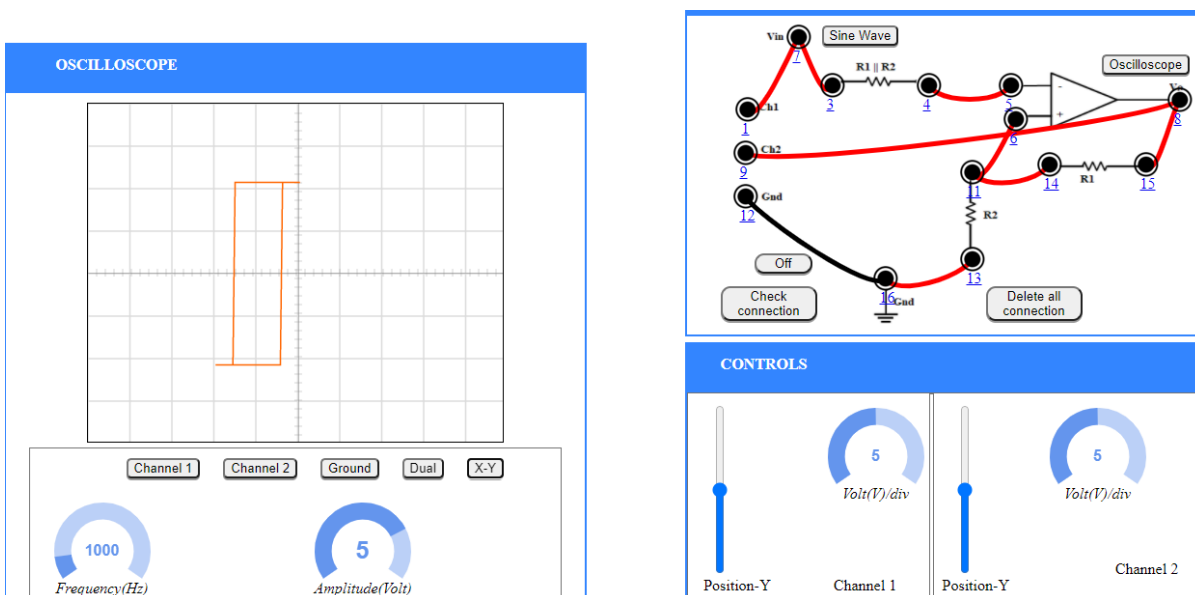

volt/div= 2volt. (which means each major division is 2 volt, and each minor division is 0.5 volt)

time/div = 0.1ms/sec (which means each major division is 0.1ms, and each minor division is 0.02 ms)

OSCILLOSCOPE

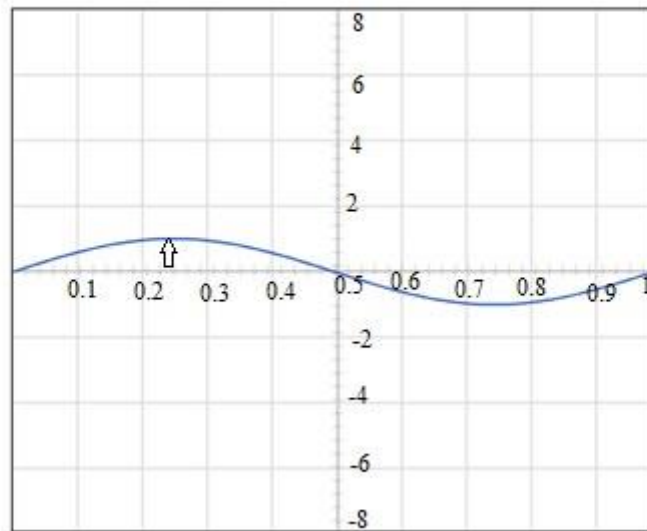

Note 1: If you set the Volts/Div too low, you'll clip the signal. Similarly, setting it too high, and you'll won't find the signal, i.e. the signal will be flat.

Increasing the Timebase will display more cycles of a periodic signal. Conversely, reducing the Timebase, fewer cycles will be displayed.

Note 2: Sometimes due to page load or cache, the graph may not come exact at one click. So it is better to double click on the channel-1 function/ channel-2 function/ dual function/ ground function to get the respective signals.